



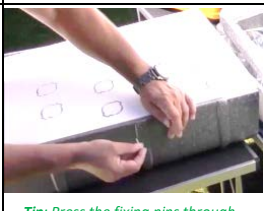
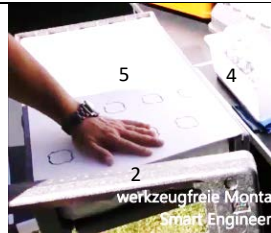
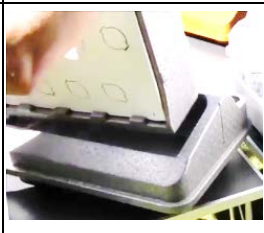
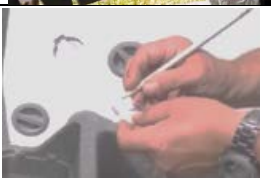



Short-Manual for i3-Benjamin vertical garden



Detailed video documentation at:
www.i3-garden.com

 <p><i>Tip: Bag must be completely flat and reach the corners</i></p>	<p>Contents: 1x Corpus (1), 1x lid (2), 1x base(3) *, 1x flat garden (4), 1x planting plate (5), 1x substrate-empty sack (6), i3-Dock set (s) (7) à 6 pcs with lids, 1x mounting kit (4 fixing pins, i3 sticker)</p> <p>Optional: Available under www.i3-garden.com/shop i3-automatic irrigation system, base with wheels (3) indoor/outdoor *</p> <p>* = for some sets already included</p>	
 <p><i>- i3-Benjamin Pro-Kit - i3-Benjamin Pro-Kit indoor</i></p>	<p>step1 – Socket & Wheels Insert the 4 wheels (8) with light pressure into the intended openings of the base</p> <p>exception: i3-Benjamin Starter-Kit w/o base - stand or wall mounting with 2 brackets (total weight app.50kg)</p>	 <p><i>Tip: 1x i3-Dock is already pre-assembled as a template</i></p> <p>step2 – complete the i3-Docks(7)</p> <ul style="list-style-type: none"> Slide the cover plate on the base, pay attention to fit, press the front left + right tightly – <i>click / click</i> Fix the octagonal ring firmly – <i>click</i>
 <p><i>Tip: Bag must be completely flat in the body and in the corners</i></p>	<p>step3–corpus&substrate&planting plate</p> <ul style="list-style-type: none"> Place the substrate sack (9) in the corpus, strip it out until it's flat in the body and in the corners alternatively insert the i3-empty sack and fill it with substrate -after step5 	 <p><i>Tip: Press the fixing pins through the corpus material –see the marking (11)</i></p> <ul style="list-style-type: none"> Place the planting plate (5) in the grooves below, left and right (the 2 small holes in the plate marking "top"). Fix the plate with the 4 fixation pins (2x left + 2x right) -see markers (11) on the 2 middle bulges left + right
 <p><i>werkzeugfreie Montage Smart Engineer</i></p>	<p>step4 – EPP-lid</p> <ul style="list-style-type: none"> Put on the EPP-lid(2) 	 <p>step5 – body & base</p> <ul style="list-style-type: none"> Place the base(3) on a solid surface, put the body(1) in the socket (inclination to the rear)
 <p><i>Tip: outbreak = planting label (10) with pencil re-writable</i></p>	<p>step6 – i3-Dock(7) -mounting</p> <ul style="list-style-type: none"> Cut the sack at desired positions with scissors or knives, remove breakouts = "planting signs"(10) for labeling Insert planted i3-docks(7) into the planting plate(5), turning to the right = locked 	 <p>step7 – flat garden(4)</p> <ul style="list-style-type: none"> Insert the Flat garden(4) into the lid opening Fill with substrate <p>Accessories: i3-automatic irrigation-system</p> <ul style="list-style-type: none"> here the flat garden is placed on the water reservoir with a plate

A steadily growing [range of accessories](http://www.i3-garden.com/shop), [tips and tricks](http://www.i3-garden.com/shop), [FAQ's](http://www.i3-garden.com/shop) and much more can be found at: www.i3-garden.com/shop

Care Note: Use lukewarm water for cleaning with a little dishwashing detergent or a cleaning sponge.
 Do not use "sharp" cleaning agents.



